Two-Year Limited Warranty

CAD Audio hereby warrants that this product will be free of defects in material and workmanship for a period of two years from the date of purchase. In the unlikely event that a defect occurs CAD Audio will, at its option, either repair or replace with a new unit of equal or greater value. Retain proof of purchase to validate the purchase date and return it with any warranty claim.

This warranty excludes exterior finish or appearance, damage from abuse, misuse of the product, use contrary to CAD Audio's instructions or unauthorized repair. All implied warranties, merchantability, or fitness for a particular purpose is hereby disclaimed and CAD Audio hereby disclaims liability for incidental, special or consequential damages resulting from the use or unavailability of this product.

This warranty gives you specific legal rights and you may have other rights that vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

Note: No other warranty, written or oral is authorized by CAD Audio.





DA4090 Antenna Distribution User Guide



 
Specifications DA4090

Input Impedance	50ohms
	50ohms
	BNC
	BNC
•	0 - 3dB
Frequency Range	200MHz - 1GHz
	DC 12 - 18V 3A
	600mA each
	1.8" [4.5cm] x 16.1" [41cm]
	x 6.3" [16cm]
Weight [mass]	4.4lbs [2.0kg]

DA4090 Antenna Distribution Amplifier Layout

- 1. On/Off switch.
- 2. Holes for BNC bulkhead connectors to front mount antennas.
- 3. Antenna inputs.
- 4. Antenna distribution outputs.
- **5.** Power outputs: provides power to receivers.
- **6.** AC adapter input.





Using the DA4090 Distribution Amplifier to Simplify Multiple-System Installations

- 1. BNC 50 ohm cable.
- 2. Power cable.
- **3.** Power adapter.
- 4. BNC whip antennas (not included).
- 5. BNC bulkhead connectors.

